

## Reset maintenance hour counter

**Question** How do I reset the message "maintenance is needed" from the display?

**Answer** With stopped generator (Whisper Standby Mode) follow the steps below:

- Keep Select button pressed for 4 seconds, display will show "*Select Menu Press SEL to Enter*"
- Scroll with Select button to "*Service Menu Press Set to Enter*"
- Press Set button to enter menu, display will show "*CLR Maint. Time Press Set 3s*"
- Press Set for 3 seconds until text "*Done*" appears.
- Scroll with Select button until the text "*Exit Menu Press Set*" is shown
- Press Set to exit this level
- Again scroll with Select button until the text "*Exit Menu Press Set*" is shown
- Press Set to exit this level and return to "*Whisper Standby Mode*"